




Operation & Installation Instructions

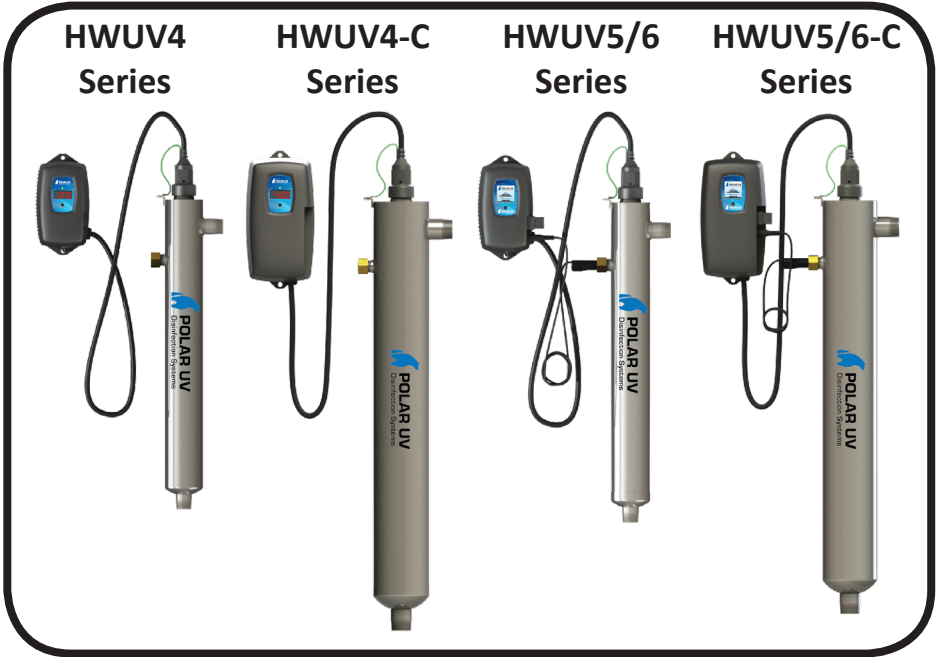

POLAR UV - Standard Systems					
System	Rated Flow	System	Rated Flow	System	Rated Flow
HWUV4-2 HWUV5-2 HWUV6-2	2 gpm	HWUV4-15 HWUV5-15 HWUV6-15	15 gpm	HWUV4-15C HWUV5-15C HWUV6-15C	15 gpm
HWUV4-3 HWUV5-3 HWUV6-3	3 gpm	HWUV4-21 HWUV5-21 HWUV6-21	21 gpm	HWUV4-25C HWUV5-25C HWUV6-25C	25 gpm
HWUV4-6 HWUV5-6 HWUV6-6	6 gpm	HWUV4-5C HWUV5-5C HWUV6-5C	5 gpm	HWUV4-40C HWUV5-40C HWUV6-40C	40 gpm
HWUV4-11 HWUV5-11 HWUV6-11	11 gpm	HWUV4-10C HWUV5-10C HWUV6-10C	10 gpm		

Congratulations on purchasing this ultraviolet disinfection system. By purchasing a POLAR UV Disinfection system you are receiving not only a high quality product but also peace of mind. Protecting your water supply with a UV system gives you reassurance that your family will have access to safe drinking water throughout your entire home with no chance of microbiological contamination. This is a chemical free process which is simple in its concept and effective in its abilities to inactivate microorganisms present in the water supply. Simple maintenance, continuous disinfection and ultimately safe water, POLAR UV makes it that easy.

TABLE OF CONTENTS

Safety Considerations.....	4
Before You Begin	5
Water Quality Parameters	5
Assembly	6
System Sizing	8
Location	8
Installation	9
System Disinfection	12
Cleaning the Quartz Sleeve	13
Cleaning the UV Sensor	14
Operation	15
HWUV4 & HWUV4-C Controllers	15
HWUV5/6 & HWUV5/6-C Controllers	15
HWUV5/6 & HWUV5/6-C Power-up Sequence	16
HWUV5/6 & HWUV5/6-C Operational Screens	17
HWUV6 & HWUV6-C Operational Screens	17
Lamp Countdown Sequence	18
Lamp Replacement (HWUV4 / HWUV4-C systems)	19
Lamp Replacement (HWUV5/6 & HWUV5/6-C systems)	19
System Troubleshooting.....	20
Temperature Management Devices	22
Expansion Modules	22
POLAR UV Standard Output System Specifications	24
POLAR UV-HO High Output System Specifications	25
POLAR UV Systems Limited Warranty Statement.....	26
Warranty Registration	27

Safety Considerations

Although your UV system has been manufactured to the highest safety standards, care must be followed when operating and/or maintaining your system.

1. Before servicing the system, disconnect the power cord from the electrical outlet.
2. **Energy given off by the UV lamp is harmful to your eyes and skin.** NEVER look directly at an illuminated UV lamp without adequate eye protection and always protect your skin from direct exposure to the UV light.
3. For complete disinfection, use ONLY genuine replacement parts.
4. Do not operate the unit if it has any damaged or missing components.
5. To avoid possible electrical shock, use the unit only with a properly grounded electrical outlet.
6. Never perform any maintenance to the system unless you are comfortable in doing so. Contact the manufacturer for service instructions if required.
7. Do not use this system for any purpose other than what it was intended for. Misuse of this system could potentially cause harm to the user or others.
8. Your system is intended to be installed indoors and away from leaking plumbing. DO NOT plug the unit in if the system or any of the components are wet.
9. The disinfection system should be directly installed into a ground fault circuit interrupter (GFCI). If the use of an extension cord is required, the cord must be manufactured with a minimum of 16 gauge wire and care should be taken to avoid potential tripping hazards.
10. We recommend that a licensed plumber or certified technician install the system.

Before You Begin

The following will be needed for installing the UV system:

Tools

- Pipe cutter, hacksaw or other specialized tools required to cut into your existing plumbing (e.g. if you have PEX piping)
- Soldering tools (torch, flux, emery cloth and solder)
- Wrench (for tightening fittings)

Other Materials

- Inlet/outlet connections
- Teflon™ tape

Water Quality Parameters

UV disinfection is extremely effective against microorganisms but only if the UV light can pass through the water it needs to treat. This means that the quality of your water is very important in order to ensure complete disinfection.

Treated water should be tested for at the least the parameters listed below. If the water exceeds the listed parameters POLAR UV strongly recommends that appropriate pretreatment equipment be installed (equipment required will depend on parameters being treated):

Hardness: <7 gpg (120 mg/L) – if hardness level is 7 gpg or slightly below the quartz sleeve must be cleaned periodically in order to ensure efficient UV penetration; if above the water must be softened.

Iron (Fe): <0.3 ppm (0.3 mg/L)

Manganese (Mn): <0.05 ppm (0.05 mg/L)

Turbidity: < 1 NTU

Tannins (organics): <0.1 ppm (0.1 mg/L)


UVT (transmittance): >85% (Please contact POLAR UV if water has a UVT that is less than 80% for pre-treatment recommendations)

You can have your water tested at a private analytical laboratory or by your local dealer. It is always recommended to install pre-filtration of at least 5 microns prior to a POLAR UV disinfection system.


Assembly

Unpack the system and ensure all the components are included with the system. Your system is shipped with the following components:

POLAR UV (Standard output lamp systems)

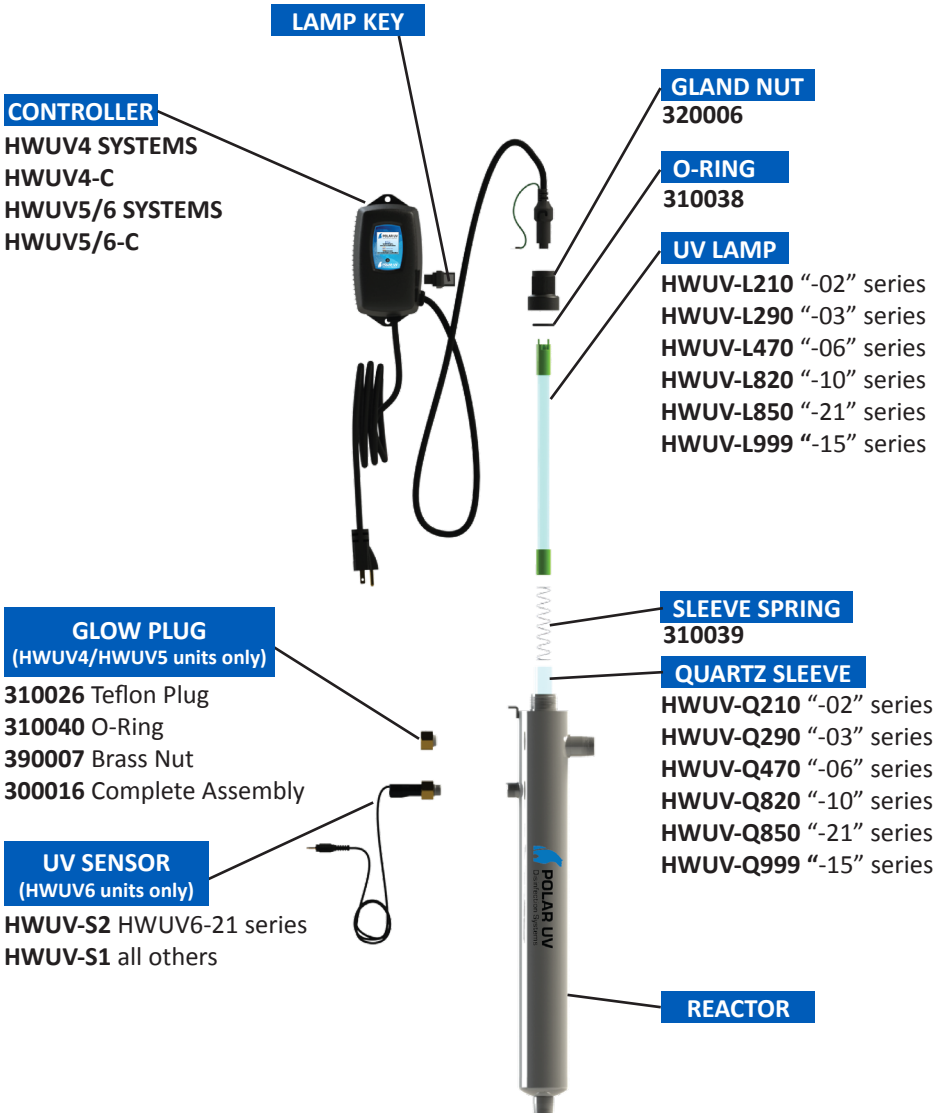

POLAR UV-HO (High output lamp systems)

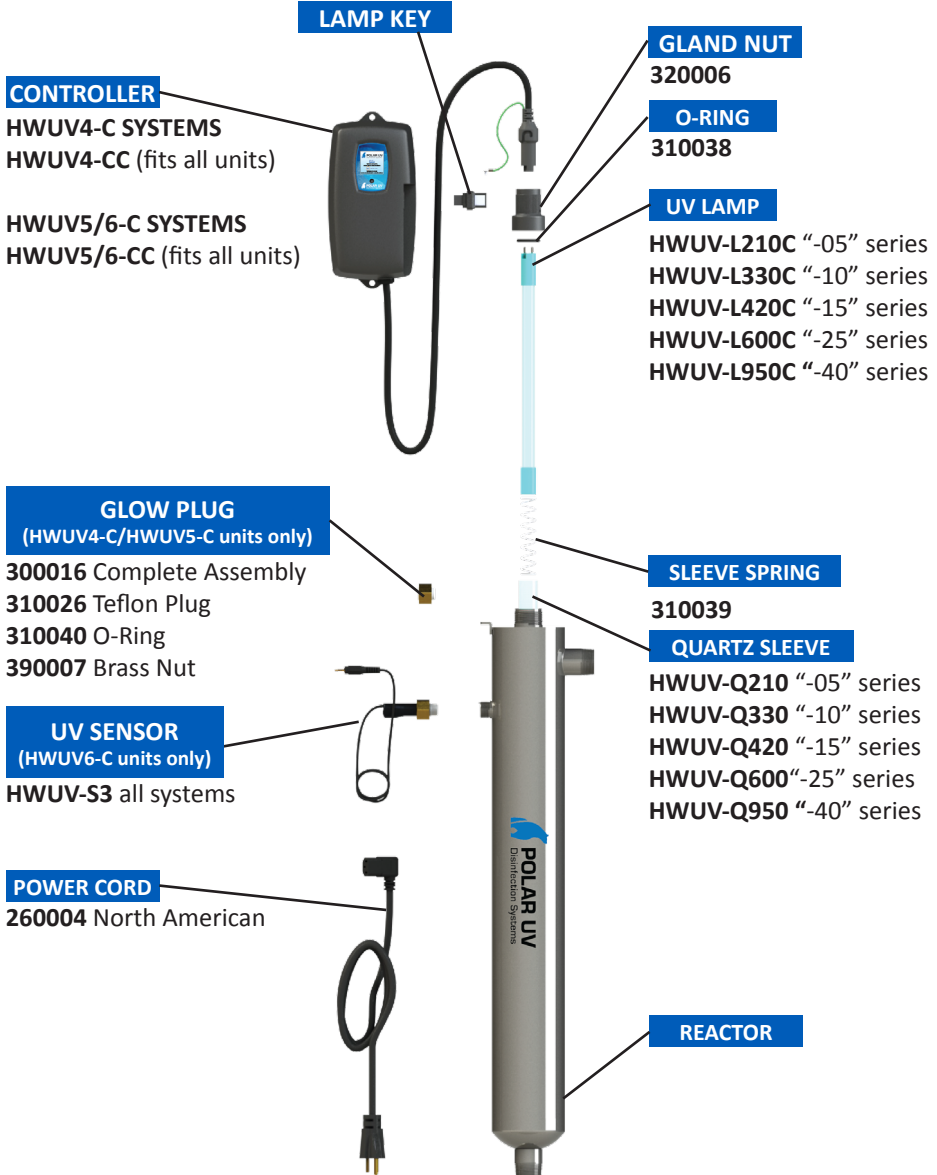

System Sizing

All POLAR UV systems are rated for a specific flow rate in water that meets the quality parameters on page 5. **PLEASE NOTE** that increasing the flow above this rating or disinfecting water that does not meet the quality parameters will decrease the dose and therefore compromise the microorganism inactivation.

To determine flow rate follow these simple steps:

- Be sure no water is being used in the home. Open a faucet or tap nearest the pressure system and run until the well pump starts. Close the faucet and using a second hand watch, record the length of time in seconds until the pump stops. This is known as the cycle time.
- Then using a container of known volume, preferably in US Gallons, open the faucet or tap nearest the pressure system and measure the amount of water drawn off until the pump starts again. Depending on the size of the container used, it is acceptable to turn the faucet on and off to empty the container. This measurement is known as the draw down.
- To calculate the pressure system flow rate divide the draw down by the cycle time and multiply that by 60.
- Draw Down _____ ÷ Cycle Time _____ x 60 = _____ Pumping Rate in USGPM

Location

For Point of Entry (POE) systems, choose a location where the main cold water line is accessible. Install the system after other water treatment equipment (softener or filters), but before any branches (See Figure 1). For Point of Use (POU) systems, install the unit just before the faucet. POLAR UV recommends that a 5 micron filter be installed **before** the UV system for a final polishing step before the water is disinfected.

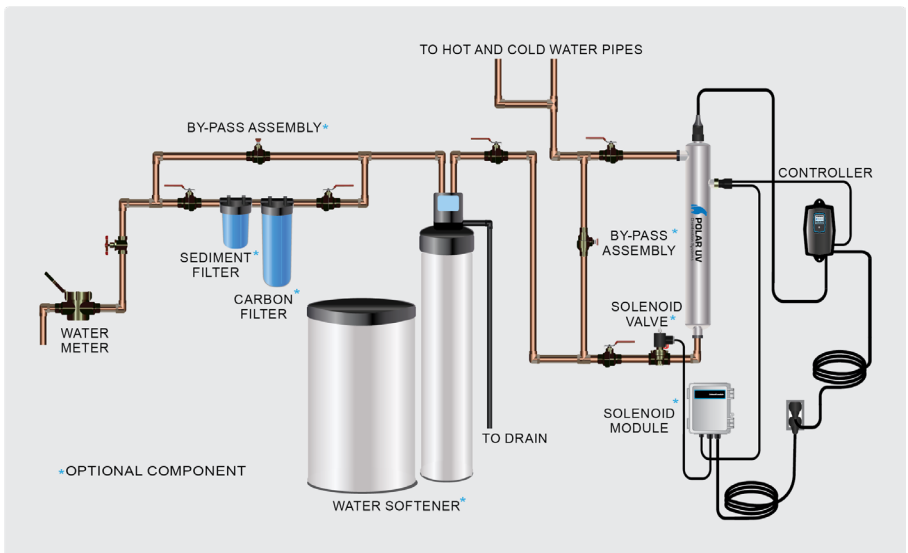


Figure 1. Recommended POE Installation Location

To facilitate lamp removal, ensure there is enough space at the lamp connector end to safely remove the UV lamp and/or quartz sleeve (See Figure 2). The controller will require a ground fault circuit interrupter (GFCI or GFI) outlet and should be mounted beside or above the reactor. **PLEASE NOTE:** All POLAR UV disinfection systems are intended for indoor use only as they should not be exposed to the elements.

Installation

Step 1: The reactor can be installed either horizontally or vertically using the clamps provided. Vertical installation is the preferred method with the inlet at the bottom (lamp connection at the top) as it allows any air that may be in the lines to be easily purged from the system.

Step 2: The use of a by-pass assembly is recommended as it will allow you to isolate the UV reactor. This will allow for easier access in case maintenance is required (See Figure 3).

Step 3: Use the supplied fasteners to mount the UV reactor to wood or drywall. If mounting to an alternate material you will need to purchase the proper corresponding fasteners.

Step 4: For water supplies where the maximum flow rate is unknown, a flow restrictor is recommended so that the rated flow of your particular POLAR UV system is not exceeded. The flow restrictor should be installed on the inlet port of the reactor.

Step 5: It is recommended to have a licensed plumber connect the UV reactor to the water supply and may be a requirement depending on where you are located.



Figure 3. By-pass assembly

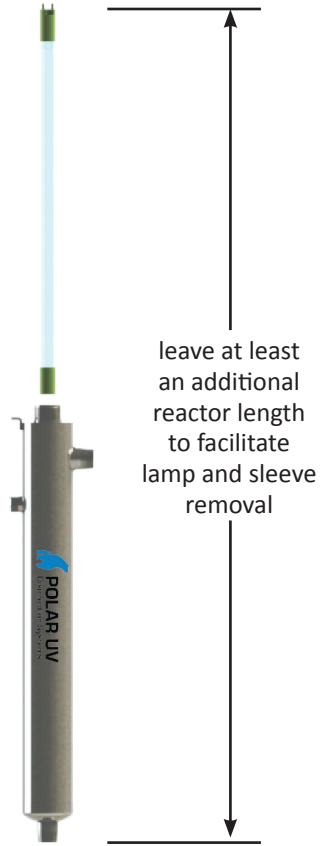


Figure 2. Lamp Removal Spacing

Note: Installation of your POLAR UV disinfection systems shall comply with applicable provincial/state & local regulations.

Step 6: Once the system has been plumbed in, gently remove the quartz sleeve from its packaging being careful not to touch the length with your hands. The use of cotton gloves is recommended for this procedure as oils from the hands can leave residue on the sleeve and lamp which can ultimately block the UV light from getting to the water.

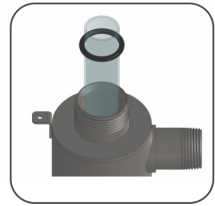


Figure 4. Quartz Sleeve Installation

Carefully slide the sleeve into the reactor until you can feel it hit the opposite end of the reactor. Align the sleeve so it is centered along the length of the reactor, then gently push it in to lock it into the internal centering springs in the far side of the reactor. **CAUTION:** Pushing too hard when the sleeve is not aligned can damage the centering springs. Slide the o-ring onto the sleeve until it is butted up against the reactor.

Step 7: Hand tighten the provided gland nut over the quartz sleeve onto the threaded end of the reactor. It has a positive stop to prevent over-tightening. A firm force may be required to fully tighten the gland nut, but **DO NOT USE TOOLS** for this step. Insert the provided stainless steel compression spring into the quartz sleeve. The spring works with the lamp and lamp connector to create the proper lamp alignment. **PLEASE NOTE:** DO NOT install a UV lamp inside the quartz sleeve without the sleeve spring in place.

Step 8: Install the UV sensor (“HWUV6” systems only). Align the flat portion so it faces the gland nut end and matches up with the half metal lip on the sensor port (see Figure 5). Insert the sensor so it is fully seated and hand tighten the sensor nut.

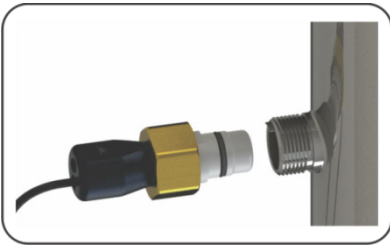


Figure 5. UV Sensor Installation



Figure 6. IEP Connection

Step 9: The reactor is now ready for water flow. When all plumbing connections have been completed, slowly turn on the water supply and check for leaks. Make sure the by-pass valves are functioning properly and that the water is flowing through the reactor. The most common leak is from the o-ring not making a proper seal on the reactor. For new installations, review steps 6 and 7. For older systems drain the reactor, remove the o-ring, dry it and reapply silicon grease. Reinstall the o-ring ensuring that it is properly sealed against the reactor and check again for leaks.

Step 10: Mount the controller to the wall so it is above or beside the reactor to ensure that no moisture can deposit on any of the connections (see Figure 1). Always mount the controller vertically. For monitored systems, insert the sensor connector into the IEP port located on the right side of the controller (Figure 6). For the sensor to be recognized by the controller, the controller power must be plugged in last. **Do not plug the controller power cord in before the last step.**

Step 11: Always hold UV lamps by their ceramic ends, not by the lamp quartz. Remove the lamp from its packaging. Again, the use of cotton gloves is recommended. Remove the lamp key from the lamp's connector and set it aside for the next step. Be careful to not touch the key's exposed contacts. Insert the UV lamp into the reactor, being careful not to drop it.

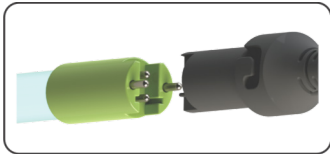


Figure 7a. Standard Output UV Lamp Connection

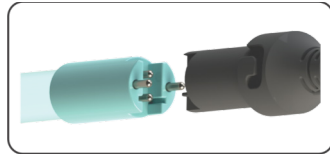


Figure 7b. High Output UV Lamp Connection

Step 12: Install the lamp key into the controller (**units with the “HWUV5/6” designation (color screen) systems only**). The key always comes packaged with the lamp and sits on the connector. With the key removed from the lamp, orient it so the label is upright and facing you. The key will plug into the lamp key port on the right side of the controller (Figure 8).

Step 13: Plug the lamp connector into the lamp. Note the keying for proper alignment (see Figure 7a, 7b). Insert the lamp connector into the gland nut and turn the connector approximately ¼ turn to lock the connector to the gland nut as in Figure 9.



Figure 8. Lamp Key Installation



Figure 9. Lamp Connector

Step 14: Tighten the captive ground screw to the ground lug on the UV reactor to ensure proper grounding.

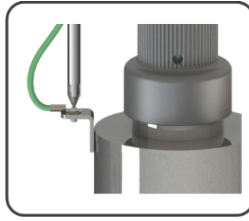


Figure 10. Ground Screw Connection

Step 15: Your system is now ready to be plugged into the appropriate GFCI protected outlet. Refer to the following *System Disinfection* section before any water is allowed to flow through the system.

System Disinfection

With a new installation, or any time the UV system is shut down for service, without power, or is inoperative for any other reason, the lines in the home or facility could be contaminated. Use the following steps to fully disinfect the lines throughout the entire home or facility.

Step 1: Check for and remove any “dead ends” in the lines throughout the home as these can harbor bacteria. Plug in the UV system and wait until it is ready for operation.

Step 2: Remove the filter cartridge from the last sump and fill it with 1-2 cups of household bleach (most are 5.25% chlorine). Replace the sump and slowly turn on the water supply.

Step 3: At a water outlet, run the water until bleach can be smelled. Repeat this for all faucets, toilets, shower heads, refrigerators, outdoor taps, the washing machine, dishwasher, etc. at the home or facility. Once finished, wait a minimum of 30 minutes before continuing.

Step 4: Reinstall the filter cartridge into the sump and flush the chlorine solution by opening all faucets until chlorine can no longer be detected. Your home has now been completely disinfected with your POLAR UV system ready to inactivate any microorganisms that enter the home.

Cleaning the Quartz Sleeve

Depending on the water quality, the quartz sleeve may require periodic cleaning. At a minimum, the quartz sleeve should be cleaned on an annual basis. The following steps outline a basic cleaning procedure.

Step 1: If a by-pass assembly is installed, shut the inlet valve off to prevent water flow through the system. Otherwise, turn off main water inlet valve (and/or turn off the water pump).

Step 2: Disconnect power cord of UV system from electrical outlet.

Step 3: Release water pressure by opening a downstream faucet and then close the outlet shut-off valve (if one is installed). If there is no outlet shut-off valve, expect water to drain from the system as the head pressure in the system will cause the water to flow back down.

Step 4: Remove the captive ground screw from the ground lug on the UV reactor.

Step 5: Remove the lamp connector from the reactor (gland nut) by pushing the lamp connector in and turning it ¼ turn counter-clockwise. Disconnect the lamp connector from the lamp. CAUTION: the lamp may be hot!

Step 6: Being careful to touch only the ceramic ends, carefully remove the lamp out of the reactor.

Step 7: Unscrew the gland nut from the reactor exposing the end of the quartz sleeve.

Step 8: Remove the quartz sleeve and o-ring by **gently twisting and pulling** the sleeve.

Step 9: Using a soft, lint-free cloth or towel wipe the sleeve down using a commercial scale cleaner (i.e. CLR® or LIME-A-WAY®). This removes scaling or iron deposits that may be on the outside of the quartz sleeve. Be careful not to get any moisture or liquids inside of the sleeve.

Step 10: Dry the sleeve with separate cloth.

Step 11: Replace the o-ring and slide the sleeve back into the reactor following steps 7 and 8 from the installation section of the manual.

Cleaning the UV Sensor

Depending on the water quality, the UV sensor may require periodic cleaning. At a minimum, the UV sensor should be cleaned on an annual basis. The following steps outline a basic cleaning procedure.

Step 1: If a by-pass assembly is installed, shut the inlet valve off to prevent water flow through the system. Otherwise, turn off main water inlet valve (and/or turn off the water pump).

Step 2: Disconnect power cord of UV system from electrical outlet.

Step 3: Release water pressure by opening a downstream faucet and then close the outlet shut-off valve (if one is installed). If there is no outlet shut-off valve, expect water to drain from the system as the head pressure in the system will cause the water to flow back down.

Step 4: Place something under the reactor to catch any water that may come out of the reactor during the removal of the UV sensor.

Step 5: Unscrew (counterclockwise) sensor nut from the reactor and pull the sensor slowly out of the sensor port.

Step 6: Holding the sensor in your hand wipe the flat portion (sensor face) of the sensor with isopropyl alcohol using a clean lint-free cloth.

Step 7: Replace sensor following step 9 from the installation section of the manual.

Operation

POLAR UV systems come with a feature laden controller that incorporates both the lamp driver (ballast) and control features in one water-tight case. Four main controllers are available for the POLAR UV systems (depending on your model). All four models feature a power factor corrected, constant current lamp driver with a universal power input.

Please Note: While the LED or display screen is red and the buzzer is sounding the water from the system should NOT be consumed. If any water does pass through the system during this period, please follow the disinfection procedure as outlined in this manual before the water is consumed. For a non UV monitored systems, even though they have a visual and audible warning built into the controller, a green LED or status screen does not necessarily indicate that the water coming from this system is in fact potable (safe to drink). These systems do not measure the level of disinfection; they simply measure the “on-off” status of the lamp. Please have your water checked for microbiological contaminants on a regular basis.

HWUV4 & HWUV4-C Controllers



**HWUV4
Series**



**HWUV4-C
Series**

Simplistic in operation, these systems feature a tri-color LED that indicates system status and a 4-digit display to indicate lamp life remaining. Pressing the button will change the display to indicate total running time. When the UV lamp is on and within its operating age, the LED will be green. When the UV lamp is not on or the lamp life has expired, the LED will be illuminated red and an audible buzzer will be sounding. To remedy this condition, the UV lamp must be replaced with a new genuine POLAR UV lamp.

HWUV5/6 & HWUV5/6-C Controllers



**HWUV5 /
HWUV6
Series**




**HWUV5-C /
HWUV6-C
Series**

A full color LCD screen provides the user with a detailed description of the system’s performance in addition to providing any applicable fault messages and system diagnostics. The controllers used in both the monitored and non-monitored are identical. The difference is that the HWUV6 series of products includes a UV intensity monitor. All HWUV5 controllers include an “infinite expandability port” located on the right side of the controller. Simply plug in an optional UV sensor module into the expandability port of a non-monitored controller and the system will now monitor the UV intensity of the system!

HWUV5/6 & HWUV5/6-C Power-up Sequence



On start up, the controller will run through a diagnostic start-up and the sequence will be displayed as follows on the color LCD:

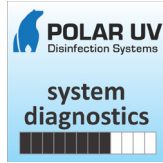


Next, the controller checks for and initializes any optional modules that may be attached to the system.

Optional Modules Check

-  - UV Sensor
-  - Solenoid
-  - 4-20 mA
-  - WIFI
-  - Remote Alarm
-  - Flow Meter

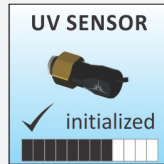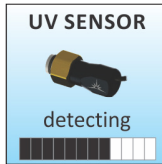


OR

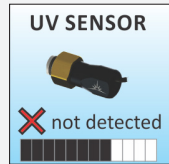


A final module screen is displayed showing which specific modules were initialized.

The controller then displays the lamp optimization screen for 60 seconds to allow the lamp to reach its optimum output. Finally, a final “start-up complete” screen is displayed. The system will now be ready to disinfect water flow.

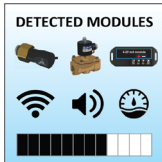

All detected modules

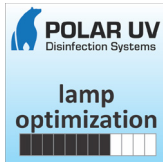

Lamp reaching max output



Successful start-up





HWUV5/6 & HWUV5/6-C Operational Screens

On systems without the UV monitor, the default screen shows the POLAR UV Home Screen. At any point during operation the user is able to scroll through the Home Screen, Lamp life remaining, QR Code, Contact Info and Maintenance Parts screens by pressing the button located on the front of the controller.





	 <p>POLAR UV Disinfection Systems</p> <p>2M</p> <p>Tel 866-289-6475 www.2mco.com/locations</p> <p>Hydro WESTERN HYDRO</p> <p>Tel 800-972-5945 www.westernhydro.com/locations</p>	 <p>POLAR UV Disinfection Systems</p> <p>375 Days Lamp Life Remaining</p>	<p>Contact dealer for more information</p> 	 <p>POLAR UV Disinfection Systems</p> <p>2M</p> <p>Tel 866-289-6475 www.2mco.com/locations</p> <p>Hydro WESTERN HYDRO</p> <p>Tel 800-972-5945 www.westernhydro.com/locations</p>	<p>Maintenance Parts</p> <p>Lamp: HWUV-L820 Sleeve: HWUV-Q820 Sensor: HWUV-S1 Controller: HWUV56-C</p>
	 <p>POLAR UV Disinfection Systems</p> <p>2M</p> <p>Tel 866-289-6475 www.2mco.com/locations</p> <p>Hydro WESTERN HYDRO</p> <p>Tel 800-972-5945 www.westernhydro.com/locations</p>	 <p>POLAR UV Disinfection Systems</p> <p>420 Days Lamp Life Remaining</p>	<p>Contact dealer for more information</p> 	 <p>POLAR UV Disinfection Systems</p> <p>2M</p> <p>Tel 866-289-6475 www.2mco.com/locations</p> <p>Hydro WESTERN HYDRO</p> <p>Tel 800-972-5945 www.westernhydro.com/locations</p>	<p>Maintenance Parts</p> <p>Lamp: HWUV-L600C Sleeve: HWUV-Q600 Sensor: HWUV-S3 Controller: HWUV56-CC</p>

HWUV6 & HWUV6-C Operational Screens

On systems with the UV monitor, the system will display the same screens as on the base system except the UV Intensity replaces the home screen. The UV Intensity screen displays the level of UV light detected by the sensor. UV intensity can be affected by poor water quality, scaling on the quartz sleeve and/or sensor, lamp failure or lamp expiring. The following screens show the UV Intensity dropping.


 <p>100% UV Intensity</p> 	 <p>65% UV Intensity</p> 	 <p>UV OUTPUT 64% low UV check system</p>	 <p>UV OUTPUT 56% low UV check system</p>
--	---	--	--

Below 56%, the numbers and warning sign turn red and an audible chirp is given by the ballast every 15 seconds. Below 51%, the screen is solid red and a constant audible alarm is given. This alternates with a screen indicating “water may be unsafe for consumption”. With the solenoid module, the controller de-activates the solenoid valve, shutting off all water flow.


 <p>UV OUTPUT 55% low UV check system</p>	 <p>UV OUTPUT 51% low UV check system</p>	 <p>UV OUTPUT 50% low UV check system</p>	 <p>water may be unsafe for consumption</p>
Audible chirp every 15 seconds	Audible chirp every 15 seconds	Constant audible alarm	Cycles with red low UV screen

Lamp Countdown Sequence

The system counts down the number of days until a lamp change is required.

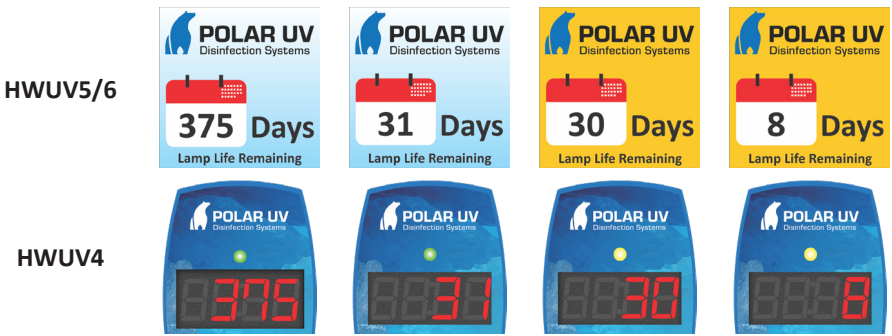

At thirty days remaining, the LED or display screen will change to a yellow caution indicator. At seven days remaining, the system will additionally repeat an audible chirp. Past the zero day threshold, the LED or display screen changes to solid red with a continuous buzzer.

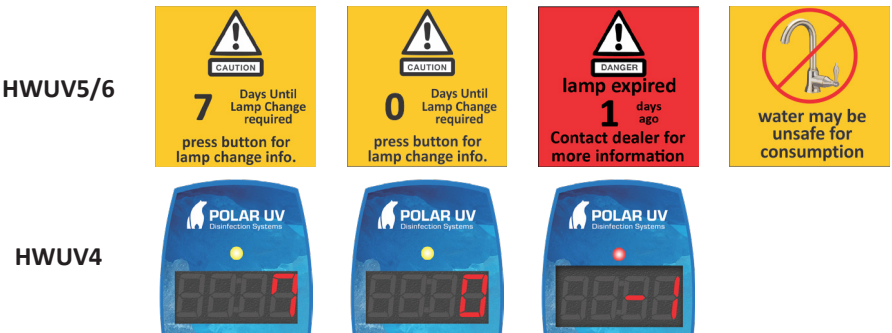

At any point during this sequence, the audible chirp or alarm can be deferred for seven days by holding the controller button down for a period of five seconds. The number of deferrals used will be displayed as below. Once the deferral expires, the alarm will sound once again. The deferral can be repeated up to three times. PLEASE NOTE: At any point after lamp expiration, the water may be unsafe for consumption and should not be consumed without another form of disinfection.



Lamp Replacement (HWUV4 / HWUV4-C systems)

After the lamp is expired, it must be replaced with the same part number as indicated by the label on the reactor. Replace the lamp by unplugging the power for the controller, then refer to **Installation**, starting with step 11 (page 11) for instructions on installing the new lamp. To reset the timer in the controller, firmly hold down the button on the controller for 10 seconds. The controller will read “rSt3”, “rSt2”, “rSt1” and then beep. The button can now be released, the lamp countdown timer has been reset.

Lamp Replacement (HWUV5/6 & HWUV5/6-C systems)

After the lamp is expired, it must be replaced with the same part number as indicated on the Maintenance Parts screen or on the label on the reactor. With the system powered down, remove and discard the lamp key from the controller. The replacement lamp is packaged with a lamp key on the connector at the end of the lamp. Remove the key from the lamp and place it in the controller. Refer to **Installation**, starting with step 11 (page 11) for instructions on installing the new lamp.



QR Codes

A **QR code** (Quick Response code) is a matrix barcode first designed for the automotive industry. POLAR UV uses the QR code to store a link to a specific page on our website. Users with a camera phone equipped with the correct reader application can scan the image of the QR code and over a wireless network connect to a POLAR UV web page in the phone’s browser. POLAR UV’s QR webpage has information on how to purchase replacement components as well as a helpful video directory on system servicing (i.e. How to change a UV lamp or quartz sleeve). To access the QR code on the controller, press the control button until the QR code screen appears.





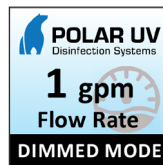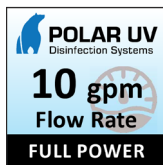



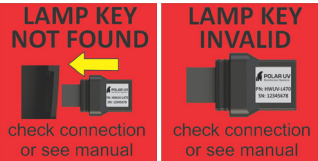
Flow Meter

Coming Soon.





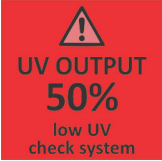


System Troubleshooting

Hard Alarms: The following give a constant audible alarm. If present, the solenoid valve is closed, and the 4-20, remote alarm and WiFi modules transmit the alarm.

System Display	Problem	Resolution
 <p>DANGER lamp failure replace lamp Contact dealer for more information</p>	The system has detected a problem with the lamp.	Reset lamp protection circuit -unplug unit for 10 seconds. Replace the lamp with the part as indicated on the silver label on the reactor or on the Maintenance parts screen.
 <p>DANGER lamp expired 1 days ago Contact dealer for more information</p>	Although the lamp is illuminated, due to its age the UV output is insufficient for proper disinfection.	Replace the lamp with the part as indicated on the silver label on the reactor or on the Maintenance parts screen.
 <p>UV OUTPUT 50% low UV check system</p>	Low UV Intensity.	Remove and clean the quartz sleeve and sensor. Check water quality meets requirements on page 5 and add filtration as required. Replace lamp.
 <p>LAMP INCORRECT Required Part: HWUV-L470 Installed Part: HWUV-L290</p>	Wrong lamp or sensor installed.	Replace component with proper model as indicated.
 <p>UV SENSOR FAILURE check connection or see manual</p>	The UV sensor is no longer communicating with the system.	Ensure all modules are connected properly to the system and to each other. Modules can be tested individually by plugging in one at a time and cycling power to the system.
 <p>CONNECTION FAILURE check connection or see manual</p>	A bad connection has been detected in the IEP port.	Replace any module that is not detected when plugged directly into the controller.
 <p>LAMP KEY NOT FOUND check connection or see manual</p> <p>LAMP KEY INVALID check connection or see manual</p>	Missing or incorrect lamp key.	Ensure the lamp key (packed with the lamp, on the connector) is installed. Unplug and reinstall the key. Ensure the key part number matches Lamp on Maintenance Parts screen.

Soft Alarms: The following remaining errors give a 15 second audible chirp only

System Display	Problem	Resolution
<div data-bbox="84 188 243 350"> <p>SOLENOID FAILURE</p>  <p>check connection or see manual</p> </div> <div data-bbox="256 188 416 350"> <p>4-20 mA FAILURE</p>  <p>check connection or see manual</p> </div> <div data-bbox="84 358 243 513"> <p>REMOTE ALARM FAILURE</p>  <p>check connection or see manual</p> </div> <div data-bbox="256 358 416 513"> <p>WIFI FAILURE</p>  <p>check connection or see manual</p> </div>	<p>The module indicated is no longer communicating with the system.</p>	<p>Ensure all modules are connected properly to the system and to each other.</p> <p>Modules can be tested individually by plugging in one at a time and cycling power to the system.</p> <p>Replace any module that is not detected when plugged directly into the controller.</p>
<div data-bbox="84 578 243 737"> <p>FLOW METER</p>  <p>check connection or see manual</p> </div> <div data-bbox="256 578 416 737"> <p>POLAR UV Disinfection Systems</p> <p>ERROR</p> <p>Flow Rate</p> <p>FULL POWER</p> </div>	<p>COMING SOON</p>	

Warning: After any hard alarm, the home or facility should be disinfected. Follow the steps under the “System Disinfection” heading.

Boil Water Advisory: If any failure occurs on a POLAR UV system, the water must not be used for human consumption until the system is returned to a safe operational mode. If the water is used for human consumption during this period, the water must be boiled (minimum 20 minutes at a full boil) prior to consumption.

Temperature Management Devices

Your UV system is designed to run continuously to ensure optimal disinfection. However, during periods when no water is drawn through the system, the energy from the disinfection process can cause the temperature of the water inside the chamber to rise. In extreme situations elevated water temperature or the fluctuation in temperature can lower the output of the UV lamp. In these cases, or if the elevated water temperature is a nuisance, POLAR UV recommends one of the following forms of temperature management devices.



Cooling Fan

Designed for use on the HO systems, the fan runs continuously to cool the water by forced convection. The long-life fan is powered independently using a compact modular power adapter that operates from 90-265V (47-63Hz). Order PN **MOD-FAN-HWUV** (only fits models with the “C” designation).



Temperature Relief Valve (TRV)

On reaching a higher temperature, the TRV is designed to drain a small amount of water to allow fresh, cooler water to enter the system. The TRV works without power and comes complete with 10’ of drain line. Order PN **MOD-TRV0.5-HWUV** for 1/2” ports, PN **MOD-TRV0.75-HWUV** for 3/4” ports, PN **MOD-TRV1-HWUV** for 1” ports and PN **MOD-TRV1.5-**

HWUV for 1 1/2” ports.

Expansion Modules

HWUV5/6 and HWUV5/6-C controllers incorporate an “**Infinite Expandability Port**” (IEP) which allows for expansion to the UV sensor and all other modules. Each module (including the sensor) comes with both a male and female connection. Connect any device to the controller and all subsequent devices are then connected into the female end of last device added in a “daisy chain” configuration.



The following optional expansion modules are available for use on HWUV5/6 and HWUV5/6-C controllers. Contact your authorized distributor for purchasing information.



REMOTE ALARM CONNECTION MODULE:

Allows for a connection to a remote device such as a buzzer, light, alarm system, PLC, etc., via a pair of contacts. In normal operation the OK and COM contacts will be connected, and in a fault condition (Low UV, Lamp fail, Power Fail), the Fault and COM contacts will be connected. Maximum Contact Rating is 1A-120V AC/DC (use 16-22 AWG). Order PN **MOD-RAM-HWUV**.



SOLENOID CONNECTION MODULE: Connects a NORMALLY CLOSED line voltage solenoid valve to the system. On a non-monitored system, the solenoid will only close on a lamp failure error. On a monitored system, the solenoid is closed when the UV level drops below 50%. Also note that in cases where emergency use of untreated water is required, the controller can be placed into a manual override mode allowing for the flow of water in an alarm condition. Order PN **MOD-SOL1-HWUV**.




4-20 mA MODULE: Outputs a 4-20mA signal of the UV output to a remote device such as a data logger or computer. Order PN **MOD-420-HWUV**.




The **WiFi module** and accompanying **IoT** application allows you to connect your UV system to a smart phone, tablet, computer or other connected platform. View system status, receive SMS or email messages of alarm conditions and monitor the health of your UV from anywhere via this connected platform. Connect the device via the APP found on Google Play or the APP Store and connect your UV device to your router, then download the software for your connected device and have peace of mind that your UV system is providing safe, reliable disinfection.

POLAR UV Standard Output System Specifications

 POLAR UV Disinfection Systems	POLAR UV EQUIPMENT SPECIFICATIONS					
	Multi-Use / Residential systems (standard output lamps)					
MODEL	HWUV4-2 HWUV5-2 HWUV6-2	HWUV4-3 HWUV5-3 HWUV6-3	HWUV4-6 HWUV5-6 HWUV6-6	HWUV4-11 HWUV5-11 HWUV6-11	HWUV4-15 HWUV5-15 HWUV6-15	HWUV4-21 HWUV5-21 HWUV6-21
Flow Rate 16mj/cm ² @ 95% UVT	3.8 gpm	6.1 gpm	11 gpm	20 gpm	30 gpm	39 gpm
	15 lpm	23 lpm	41 lpm	77 lpm	110 lpm	150 lpm
	0.87 m ³ /hr	1.4 m ³ /hr	2.5 m ³ /hr	4.6 m ³ /hr	6.8 m ³ /hr	8.9 m ³ /hr
Flow Rate 30mj/cm ² @ 95% UVT	2.0 gpm	3.1 gpm	5.8 gpm	11 gpm	15 gpm	21 gpm
	7.7 lpm	11 lpm	23 lpm	41 lpm	57 lpm	79 lpm
	0.46 m ³ /hr	0.70 m ³ /hr	1.3 m ³ /hr	2.5 m ³ /hr	3.4 m ³ /hr	4.8 m ³ /hr
Flow Rate 40mj/cm ² @ 95% UVT	1.6 gpm	2.4 gpm	4.4 gpm	8.3 gpm	12 gpm	16 gpm
	6.1 lpm	9.1 lpm	17 lpm	31 lpm	45 lpm	59 lpm
	0.36 m ³ /hr	0.50 m ³ /hr	1.0 m ³ /hr	1.9 m ³ /hr	2.7 m ³ /hr	3.6 m ³ /hr
Port Size	½"FNPT	½"MNPT	¾"MNPT	¾"MNPT	1"MNPT	1"MNPT
Electrical	90-265V/50-60Hz. 1A Max.					
Plug Type	American: NEMA 5-15P					
Lamp Power (Watts)	8	15	22	39	50	42
Power (Watts)	14	20	30	49	62	51
Replacement Lamp	HWUV-L210	HWUV-L290	HWUV-L470	HWUV-L820	HWUV-L999	HWUV-L850
Replacement Sleeve	HWUV-Q210	HWUV-Q290	HWUV-Q470	HWUV-Q820	HWUV-Q999	HWUV-Q850
Reactor Dimensions	6.4 x 26.2 cm (2.5 x 10.3")	6.4 x 36.4 cm (2.5 x 14.3")	6.4 x 54.2 cm (2.5 x 21.3")	6.4 x 89.5 cm (2.5 x 35.2")	6.4 x 101.6 cm (2.5 x 40.0")	8.9 x 91.7 cm (3.5 x 36.1")
Chamber Material	304 Stainless Steel, A249 Pressure Rated Tubing					
Controller Dimensions	17.2 x 9.2 x 10.2 cm (6.8 x 3.6 x 4")					
Operating Pressure	17.2 x 9.2 x 10.2 cm (6.8 x 3.6 x 4")					
Operating Water Temperature	2-40° C (36-104° F)					
UV Monitor	YES on all HWUV6 models. Upgrade available for HWUV5 models (NOT available on HWUV4 models)					
Solenoid Output	YES (optional solenoid module (MOD-SOL1-HWUV) sold separately)					
Dry Contacts	YES (remote alarm module (MOD-RAM-HWUV) sold separately)					
4-20mA Output	YES (4-20mA module (MOD-420-HWUV) sold separately)					
Temperature Mgmt. Valve	NA	PN# MOD-TRV0.5-HWUV	PN# MOD-TRV0.75-HWUV	PN# MOD-TRV1-HWUV		
Cooling Fan	NO					OPTIONAL (MOD-FAN-HWUV)
Lamp Change Reminder	YES					
Lamp Out Indicator	YES					
Shipping Weight	2.9 kg (6.3 lbs)	3.6 kg (7.9 lbs)	4.4 kg (9.6 lbs)	6.0 kg (13.2 lbs)	6.5 kg (14.4 lbs)	8.2 kg (18.0 lbs)

POLAR UV-HO High Output System Specifications

	POLAR UV EQUIPMENT SPECIFICATIONS				
	Residential Crossover systems (high output lamps)				
MODEL	HWUV4-5C HWUV5-5C HWUV6-5C	HWUV4-10C HWUV5-10C HWUV6-10C	HWUV4-15C HWUV5-15C HWUV6-15C	HWUV4-25C HWUV5-25C HWUV6-25C	HWUV4-40C HWUV5-40C HWUV6-40C
Flow Rate 30mJ/cm ² @ 95% UVT	5.0 gpm	10 gpm	15 gpm	25 gpm	40 gpm
	18.91 lpm	37.9 lpm	57 lpm	95 lpm	150 lpm
	1.1 m ³ /hr	2.3 m ³ /hr	3.4 m ³ /hr	5.7m ³ /hr	9.1m ³ /hr
Flow Rate 40mJ/cm ² @ 95% UVT	3.0 gpm	7.0 gpm	11 gpm	19 gpm	31 gpm
	11 lpm	26 lpm	42 lpm	72 lpm	120 lpm
	0.68 m ³ /hr	1.6 m ³ /hr	2.5 m ³ /hr	4.3 m ³ /hr	7.0 m ³ /hr
Flow Rate Hot Water (-HW suffix) model 30mJ/cm ² @ 75% UVT	2.8 gpm	7.0 gpm	9.8 gpm	16 gpm	28 gpm
	11 lpm	26 lpm	37 lpm	61 lpm	110 lpm
	0.6 m ³ /hr	1.6 m ³ /hr	2.2 m ³ /hr	3.6 m ³ /hr	6.4 m ³ /hr
Flow Rate Low UVT (-50 suffix) model 30mJ/cm ² @ 50% UVT	1.7 gpm	4.2 gpm	6.1 gpm	10 gpm	17 gpm
	6.4 lpm	16 lpm	23 lpm	38 lpm	64 lpm
	0.4 m ³ /hr	1.0 m ³ /hr	1.4 m ³ /hr	2.3 m ³ /hr	3.9 m ³ /hr
Flow Rate TOC (-TOC suffix) model 150mJ/cm ² @ 98% UVT	0.8 gpm	2.0 gpm	2.8 gpm	5.1 gpm	8.0 gpm
	3.0 lpm	7.6 lpm	11 lpm	19 lpm	30 lpm
	0.2 m ³ /hr	0.5 m ³ /hr	0.6 m ³ /hr	1.1 m ³ /hr	1.8 m ³ /hr
Port Size	¾"MNPT	¾"MNPT	1"MNPT	1"MNPT	1½"MNPT
Electrical	90-265V/50-60Hz. 1.5A Max.				
Plug Type	American: NEMA 5-15P				
Lamp Power (Watts)	18	34	45	67	101
Power (Watts)	20	36	48	72	108
Replacement Lamp	HWUV-L210C	HWUV-L330C	HWUV-L420C	HWUV-L600C	HWUV-L950C
Replacement Sleeve	HWUV-Q210	WSV-Q330	HWUV-Q420	HWUV-Q600	HWUV-Q950
Reactor Dimensions	8.9 x 29.8 cm (3.5 x 11.7")	8.9 x 41.8 cm (3.5 x 16.5")	8.9 x 50.8 cm (3.5 x 20.0")	8.9 x 68.3 cm (3.5 x 26.9")	8.9 x 103.4 cm (3.5 x 40.7")
Chamber Material	316L Stainless Steel, A249 Pressure Rated Tubing				
Controller Dimensions	21.7 x 10.8 x 10.2 cm (8.6 x 4.2 x 4")				
Operating Pressure	0.7-10.3 bar (10-150 psi)				
Operating Water Temperature	2-40° C (36-104° F)				
UV Monitor	YES on all HWUV6-C models. Upgrade available for HWUV5-C models (NOT available on HWUV4-C models)				
Solenoid Output	YES (optional solenoid module (MOD-SOL1-HWUV) sold separately)				
Dry Contacts	YES (remote alarm module (MOD-RAM-HWUV) sold separately)				
4-20mA Output	YES (4-20mA module (MOD-420-HWUV) sold separately)				
Temperature Mgmt. Valve	PN# MOD-TRV0.75-HWUV		PN# MOD-TRV1-HWUV		PN# MOD-TRV1.5-HWUV
Cooling Fan	OPTIONAL (MOD-FAN-HWUV sold separately)				
Lamp Change Reminder	YES				
Lamp Out Indicator	YES				
Shipping Weight	4.4 kg (9.7 lbs)	5.2 kg (11.5 lbs)	5.6 kg (12.9 lbs)	7.0 kg (15.5 lbs)	9.6 kg (21.1 lbs)

POLAR UV Systems Limited Warranty Statement

Products manufactured for POLAR UV are warranted to the original user only to be free of defects in material and workmanship for a period as specified below. This warranty only applies to the original purchaser and is not transferable.

UV SYSTEMS

Ten (10) year Limited Warranty on the stainless steel reactors, from the date of original purchase, or installation (proper documentation required for verification).

ELECTRONICS

Three (3) year Limited Warranty on the ballasts and controllers, from the date of original purchase, or installation (proper documentation required for verification).

UV LAMPS, UV SENSORS & QUARTZ SLEEVES

One (1) year Limited Warranty on all POLAR UV ultraviolet lamps, UV sensors and quartz sleeves from the date of original purchase, or installation (proper documentation required for verification).

POLAR UV warrants that it will repair, replace or refund, at POLAR UV's sole option, any ultraviolet system or component that is defective in materials or workmanship for the period as outlined above, subject to the "Limitations of Warranty" as outlined below. POLAR UV's liability under this warranty shall be limited to repairing or replacing at POLAR UV's option, without charge, F.O.B. POLAR UV's factory or authorized service depot, any product that POLAR UV manufactures. POLAR UV will not be liable for any costs of removal, installation, transportation, or any other charges which may arise in connection with a warranty claim. Products which are sold but not manufactured by POLAR UV are subject to the warranty provided by the manufacturer of said products and not by POLAR UV's warranty. POLAR UV will not be liable for damage or wear to products caused by abnormal operating conditions, accident, abuse, misuse, unauthorised alteration or repair, or if the product was not installed in accordance with POLAR UV's printed installation and operating instructions.

LIMITATIONS OF WARRANTY

This warranty does not apply to any of the following:

- Water Quality Parameters lie outside of the following ranges
 - Hardness > 120 mg/L (7 gpg)
 - Iron > 0.3 mg/L (ppm)
 - Manganese > 0.05 mg/L (ppm)
 - Tannins > 0.1 mg/L (ppm)
 - Turbidity > 1 NTU
 - Transmittance (UVT) < 75%
- A product that has been incorrectly installed according to the manual.
- A product that has been modified in any manner, unless approved by POLAR UV.
- A product where the serial number has been altered defaced or removed.
- Damage caused by the use of parts that are not compatible, suitable and/or authorised by POLAR UV for use with the product (e.g. non-original lamps or sleeves).

- Damage caused during shipment of the product.
- Water damage is found inside ballast housing or controllers.
- Product is installed outdoors in direct contact with the environment (rain).
- Product is installed in freezing temperatures.
- Product is used in conditions that exceed POLAR UV's specifications.

TO GET WARRANTY SERVICE

To obtain service under this warranty, you must first contact POLAR UV Customer Service at 303-305-5935 to obtain a Warranty Return Authorization. You will then need to return the product through the POLAR UV where the product was originally purchased, together with proof of purchase and installation date, failure date, and supporting installation data. Unless otherwise provided, the Dealer or Distributor will contact POLAR UV for instructions on returning the product. Any defective product to be returned to POLAR UV must be sent freight prepaid; documentation supporting the warranty claim and/or a Return Material Authorization must be included if so instructed.

POLAR UV WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSSES, OR EXPENSES ARISING FROM INSTALLATION, USE, OR ANY OTHER CAUSES. THERE ARE NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTEND BEYOND THOSE WARRANTIES DESCRIBED OR REFERRED TO ABOVE. THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY MADE BY POLAR UV WITH RESPECT TO THE PRODUCT, AND IS GIVEN IN LIEU OF ANY OTHER WARRANTY. TO THE EXTENT ALLOWED BY APPLICABLE LAW, ANY AND ALL EXPRESS OR IMPLIED WARRANTIES NOT SET FORTH HEREIN ARE WAIVED AND DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. POLAR UV LIABILITY UNDER THIS LIMITED WARRANTY IS LIMITED SOLELY TO THOSE LIABILITIES SET FORTH ABOVE. IN THE EVENT THAT ANY PROVISION OF THIS LIMITED WARRANTY SHOULD BE OR BECOME INVALID OR UNENFORCEABLE UNDER APPLICABLE LAW, THE REMAINING TERMS AND CONDITIONS HEREOF SHALL REMAIN IN FULL FORCE AND EFFECT AND SUCH INVALID OR UNENFORCEABLE PROVISION SHALL BE CONSTRUED IN SUCH A MANNER AS TO BE VALID AND ENFORCEABLE.

Warranty Registration

It is imperative that you complete the warranty registration process. This not only registers your UV disinfection system for the provided manufacturer's warranty, but also allows the factory to provide you with any important product updates or technical bulletins concerning your product. The registration process is a simple process and can ONLY be done online at www.uv-warranty.com. Please ensure that ALL information is filled in, including a valid e-mail address. **PLEASE NOTE:** This information is for the sole purpose of technical support for your disinfection system and will not be used, or sold, to any other organisation for any other purpose.



POLAR UV

Disinfection Systems



Tel 866-289-6475
www.2mco.com/locations



Tel 800-972-5945
www.westernhydro.com/locations



EPA Establishment
#088776-CAN-001



PN# 910393
Version Date: 07-2019